

When you contact your Dealer regarding service or warranty please quote the model number and serial number as shown on the heater control panel inside the control access door.



OWNER'S MANUAL

Wall Furnace - WF2000



Warranty Service
Australia 1-300-650-644
seeleyinternational.com

It is the policy of Seeley International to introduce continual product improvement. Accordingly, specifications are subject to change without notice. Please consult with your dealer to confirm the specifications of the model selected.



(English) (WF2000)



seeleyinternational.com.au



Care Instructions

External surfaces should be cleaned with warm water and detergent with the heater turned off. Do not use abrasive cleaners as scratching of the surface will occur.

Recommended Maintenance

Periodic maintenance of your Braemar Wall Furnace will ensure a long and satisfactory service life with the heater delivering optimum performance.

It is recommended that you contact your authorised Braemar service agent to arrange a routine maintenance check at the start of each heating season.

Service and maintenance work must only be carried out by Authorised personnel.



Warning

Do not place articles on or against this appliance.

Do not use or store flammable materials near this appliance.

Do not spray aerosols in the vicinity of this appliance while it is in operation.

Do not modify this appliance.

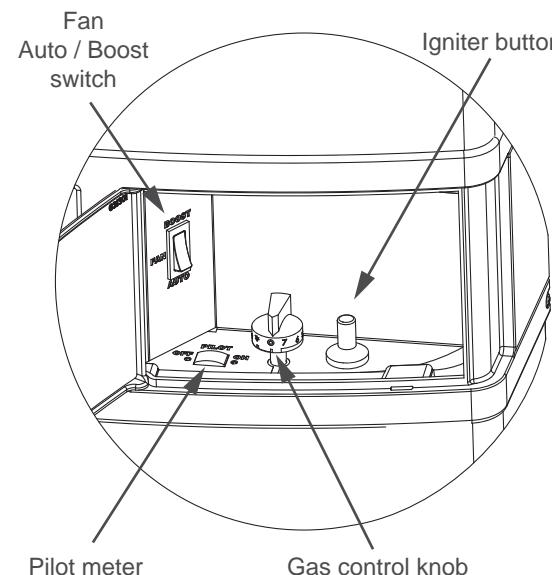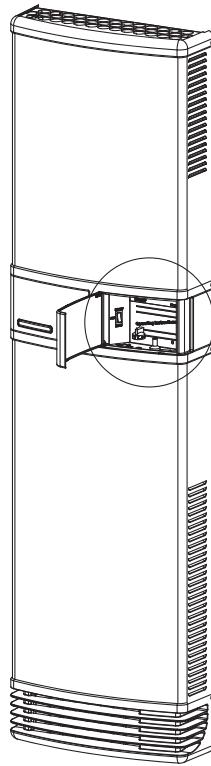

OPERATING INSTRUCTIONS

Introduction

For satisfactory performance of your Braemar gas wall furnace, please read these instructions carefully. The operation of the heater is controlled by the gas control knob and fan switch located behind the access door on the front cover.

Fan Operation

The fan will start automatically in both AUTO and BOOST positions when the unit is warm enough after the burner is turned on, and stop automatically when the unit has cooled sufficiently after the burner turns off. With AUTO selected the unit will automatically select between "low" and "normal" (and "boost" on 40MJ models) fan speeds based on the heated air temperature - no further user adjustment is necessary. When BOOST is selected the fan will run only on its boost speed. It is recommended that the manual fan switch be set to AUTO for normal operation, or BOOST for rapid heat-up.

Gas Control

To light the heater:

- Turn the gas control knob anti-clockwise from the "0" position to the  position.
- Depress knob fully and hold down.
- Press the igniter button located next to the gas control knob 3-4 times.
- Observe the pilot meter to indicate operation of the pilot.
- Wait 20 seconds then release the gas control knob and check the pilot meter stays on.
- Repeat the process if required.

Heat Setting

- Turn gas control knob anti-clockwise to desired heat setting between "1" and "7".
- The heater will automatically adjust the gas flow to maintain the room temperature corresponding to the selected heat setting.

To Increase Heat Setting

- Turn gas control knob anti-clockwise towards "7".

To Decrease Heat Setting

- Turn gas control knob clockwise towards "1".

To Turn Off Main Burner

- Turn gas control knob clockwise towards "PILOT" position. It is recommended that the pilot be left in operation during the heating season.

To Turn Off Completely (end of heating season)

- Turn gas control knob clockwise to the "0" position.