



HOME OWNER'S MANUAL

Manual Digital Thermostat - Heating



(English) (TH3/BM3)

Braemar
HEATING S COOLING

HEATER IDENTIFICATION AND INSTALLATION

Model No: _____

Serial No: _____

Installation date: _____

Installer: _____

Installer phone No: _____

This
information
is to be
completed
by the
installer

IMPORTANT SAFETY INFORMATION

THIS APPLIANCE MUST BE INSTALLED AND SERVICED BY AUTHORISED PERSONNEL ONLY.

DO NOT: Operate this appliance before reading these instructions.

DO NOT: Place articles on or against this appliance.

DO NOT: Use or store flammable materials near this appliance or its flue terminal.

DO NOT: Spray aerosols in the vicinity of this appliance or its flue terminal while it is operating.

DO NOT: Operate this appliance with any parts removed.

DO NOT: Modify this appliance.

DO NOT: Fit filters to warm air outlet registers.

For 3 and 4 star heaters, it is recommended that a flue guard be fitted where children may be able to touch the flue terminal - flue guard part No 079073.

IF YOUR HEATER STOPS WORKING

Before requesting a service call please run through the simple checks in the "Troubleshooting" section of this manual.

If required, call Braemar Service on 1300 650 644.

For spare parts call 1300 367 437.

Seeley International Pty Ltd has a policy of continuous product development and therefore reserves the right to make changes to these specifications without notice. Whilst every care has been taken to ensure accuracy of the data compiled in the document, Seeley International Pty Ltd does not assume any liability for errors and/or omissions.

Braemar is a registered trademark of Braemar Industries Pty Ltd.

Seeley International Pty Ltd ACN 054 687 035

Albury Manufacturing

77 North Street, Albury, NSW 2640

HEATER OPERATION

Turning Heater On

- 1 Press ON/OFF button.
- 2 The heater and room fan will start after a short delay (approximately 30-60 s) provided set temperature is greater than room temperature.


Turning Heater Off

- 1 Press ON/OFF button.
- 2 Heater will turn off, room fan will stop after approximately 60-90 s.


Adjusting Set Temperature

- 1 Press UP or DOWN ARROW button to increase or decrease setting - the displayed temperature will change to set temperature and flash.
- 2 Each press will increase or decrease the setting by 1°C.

Button Functions

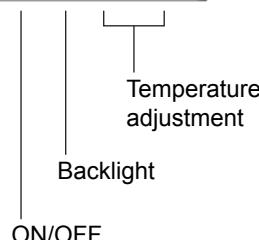

Display

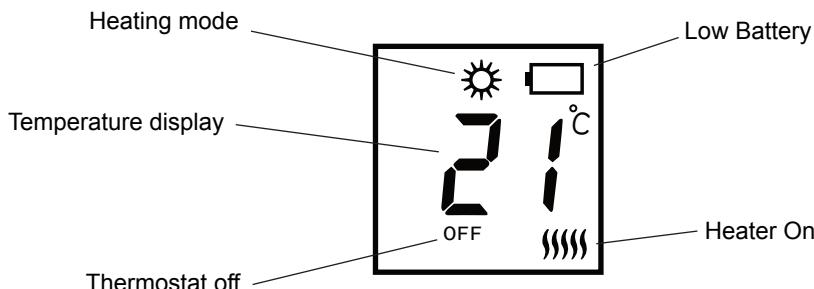


TROUBLESHOOTING

House is Not Heating Effectively

- 1 Check thermostat is set to required temperature - increase if required.
- 2 Check outlets are open to all areas that require heating.
- 3 Check that return air grille is not obstructed.
- 4 Check that return air filter (where fitted) is clean - cleaning every 2 weeks is recommended.
- 5 Check that external doors and windows are closed.

REPLACING THE BATTERIES

- 1 When the battery symbol  appears new batteries are required.
- 2 Un-clip the bottom of the front of the thermostat and pull forwards.
- 3 Fit 2 x AA batteries and clip front of thermostat back in place (note direction of battery '+' and '-').

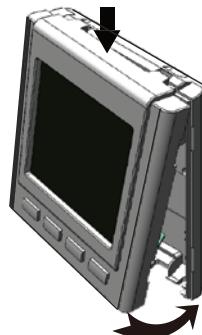

Warranty Service
Australia 1-300-650-644
seeleyinternational.com

It is the policy of Seeley International to introduce continual product improvement. Accordingly, specifications are subject to change without notice. Please consult with your dealer to confirm the specifications of the model selected.

